

## Slopeable/Skewable Rafter Hanger

The patent-pending LSSR light slopeable/skewable rafter hanger is the next generation of field-adjustable rafter hangers. One of its key features is that it can be installed after the rafter has been tacked into place. A versatile hanger, it is field adjustable for skews up to 45° and features an innovative hinged swivel seat which adjusts up to a 45° slope. New models are now available for 2x lumber.

- Makes it possible to install after the rafters are already in place
- Flange design allows for easy skew (left or right) adjustment,
- Swivel seat adjusts easily from 0° to 45° up or down

Material: See table Finish: ZMAX® coating


### Installation:

- · Use all specified fasteners; see General Notes
- · Limit on-center spacing of rafters and joists with LSSR210-2Z and LSSR410Z to 14" o.c. minimum; for the LSSR26Z, LSSR28Z and LSSR210Z, limit on-center spacing to 8" o.c. minimum.
- · For a common rafter:
  - Slide hanger into position; adjust seat and install seat nails
  - Make sure side stirrups are snug close to the joist, bend lines are plumb
  - Install a face nail on each side to hold in place
  - Install all round and obround holes on the header and joist
- · For jack rafters:
  - Fold acute side forward
  - Slide hanger into position; adjust seat and install seat nails
  - Make sure hanger is snug close to the joist, bend line is plumb
  - Install obround nails on acute side, both header and joist
- Make sure hanger is snug close to the joist and header; bend line is plumb
- Install joist nails on obtuse side
- Bend obtuse side flange back so that header flange is flush against header
- Install header nails


Codes: See p. 13 for Code Reference Key Chart


Web Applications: Visit app.strongtie.com/hs to access our Hanger Selector web application.



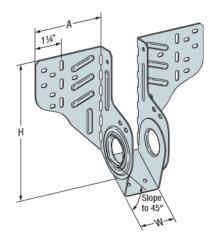


LSSR26Z

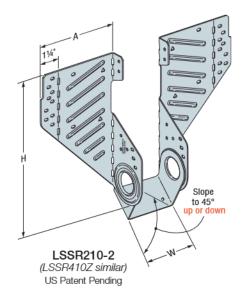


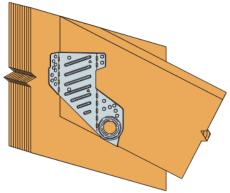


Typical Sloped and Skewed LSSR Installation

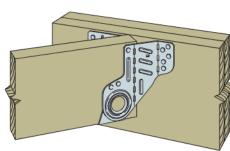

LSSR26Z Installation at 45° Skewed Left

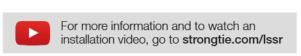

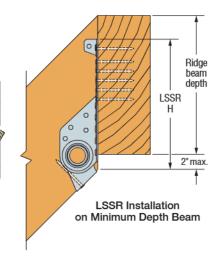



# Slopeable/Skewable Rafter Hanger (cont.)

These products are available with additional corrosion protection. For more information, see p. 16.

		t Model h No.	Ga.	Dimensions (in.)			Fasteners (in.)		Allowable Loads								
	Actual Joist			w	н	A	Face	Joist	DF/SP Species Header				SPI	SPF/HF Species Header			Code
	Width (in.)								Uplift (160)	Floor (100)	Roof		Uplift	Floor	Roof		Ref.
											Snow (115)	Const. (125)	(160)	(100)	Snow (115)	Const. (125)	
	Sloped Only Hangers																
		LSSR26Z	18	1%6	5%	2½	(12) 0.148 x 2½	(8) 0.148 x 11/2	460	1,065	1,065	1,065	395	915	915	915	· IBC®, FL, · LA
	11/2	LSSR28Z			71/8		(14) 0.148 x 2½	(10) 0.148 x 1½	785	1,405	1,405	1,405	675	1,210	1,210	1,210	
		LSSR210Z			91/8		(14) 0.148 x 2½	(10) 0.148 x 1½	785	1,405	1,405	1,405	675	1,210	1,210	1,210	
	3	LSSR210-2Z	16	31/8	815/16	51/8	(22) 0.162 x 21/2	(18) 0.162 x 2½	695	2,365	2,365	2,365	600	2,035	2,035	2,035	
	31⁄2	LSSR410Z	16	3%	815/16	51/8	(22) 0.162 x 21/2	(18) 0.162 x 2½	695	2,365	2,365	2,365	600	2,035	2,035	2,035	
	Skewed Hangers or Sloped and Skewed Hangers																
		LSSR26Z LSSR28Z	18	1%6	5%	2½	(11) 0.148 x 2½	(7) 0.148 x 1½	460	760	760	760	395	655	655	655	· IBC, FL, · LA
	1½				71/8		(13) 0.148 x 2½	(8) 0.148 x 11/2	785	925	925	925	675	795	795	795	
		LSSR210Z			91/8		(13) 0.148 x 21/2	(8) 0.148 x 1½	785	1,150	1,150	1,150	675	990	990	990	
	3	LSSR210-2Z	16	31/8	815/16	51/8	(20) 0.162 x 21/2	(13) 0.162 x 2½	695	1,810	1,810	1,810	600	1,555	1,555	1,555	
	31/2	LSSR410Z	16	3%	815/16	51/8	(20) 0.162 x 21/2	(13) 0.162 x 21/2	695	1,810	1,810	1,810	600	1,555	1,555	1,555	

- 1. Uplift loads have been increased for earthquake or wind loading with no further increase allowed. Reduce where other loads govern.
- For slope-only installations, the four triangle holes may be filled for an allowable roof download of 3,015 lb. for DF/SP and 2,595 lb. for SPF/HF for LSSR 16GA.
- 3. Roof loads are 125% of floor loads unless limited by other criteria. Floor loads may be adjusted for load durations according to the code provided they do not exceed those in the roof column.
- 4. On the acute side of the skewed LSSR hanger, fill obround holes only.
- 5. Fasteners: Nail dimensions are listed diameter by length. See pp. 23–24 for fastener information.

